



Resistance temperature sensor Ex d to heat sink DIN without converter or with converter type series 230 type 233

PRODUCT MANUAL

FOR DESIGNS WITH CONVERTER A MANUAL IS ENCLOSED TO THE RELEVANT CONVERTER

APPLICATION

- For exact remote measurement of temperature of steady and running liquids (gases and fluids), for which the properties of the heat sink of the sensor selected by the customer are suitable; measurement may be realized up to temperature (max. 450°C) and pressure determined by heat sink resistance
- For explosive environment pursuant to ČSN EN 60079-10 (ČSN EN 61241-10)
 - o Sensor may be installed into the heat sink located in zone 0 (20), zone 1 (21) or zone 2 (22), the heat sink for zone 0 shall comply with the requirements of ČSN EN 60079-26 ed. 2 (refer to figure 2)
 - o Other parts of the sensor (screw joint, adapter, connecting head) may be located in zone 1 (21) or zone 2 (22)
 - o In case of using the converter Ex ia or connection into circuit Ex ia, the sensor may be used in zone 0 (20)
- In a set with control or diagnostic systems for process monitoring
- In design with converter for transfer of resistance sensor signal to unified output signal 4 to 20 mA or digital signal (converter with HART protocol)

The sensors are rated products pursuant to the Act No. 22/1997 Coll. and Declaration of Conformity **EC-233000** is issued for them.

DESCRIPTION

The sensor consists of a replaceable measuring insert with a flange and ceramic terminal board or installed two-wire converter (insulated or non-insulated, even in design Ex ia) and protective armature, consisting of a head and an adapter with a screw joint for the connection of the sensor into the heat sink selected by the customer. The head with measuring insert and outlet form a fixed closure Ex d. It is provided with a lid, which can be screwed, and a cable outlet for the connecting wiring. The cable outlet (pursuant to the required diameter of the cable) forms optional accessories to the sensor. The terminal board (of the converter) of the sensor is accessible after unscrewing the lid of the head, which is fixed, after being tightened, with a pin against spontaneous releasing. The sensor is provided with an external terminal and an internal terminal on the head for the connection of the grounding wire or the wire for mutual interconnection.

The sensor with converter is supplied from an external source. The installed converter is pre-set to the required range at the sensor manufacturer.

To measure temperature, a defined change of sensor resistance in dependence on the change of temperature of the measured environment is used.

TECHNICAL DATA

The sensor design is based on DIN 43772. The sensor is designed pursuant to ČSN EN 61140 ed.2 as an electric equipment of protection class III for the application in networks with category of overvoltage in installation II and pollution grade 2 pursuant to ČSN EN 61010-1; the follow-up (evaluation) device shall comply with Article 6.3 of the said standard.


Measuring range:

Sensor with standard adapter $L_n = 135$ (125) mm
-70 to 450 °C
Sensor with shortened adapter $L_n \text{ min} = 65$ mm
-70 to 250 °C

The upper limit of the measuring range is limited by resistance of the material of the heat sink; however, it may not exceed 450°C.

If it is ensured with a suitable way of installation that the surface temperature of the part of the sensor located in dangerous area does not exceed the temperature of the

required temperature class (T1...T6), the upper limit of the range of measurement may be even higher (max. 600°C). For an example of installation, refer to figure 5. Measuring range of the sensor with converter is established by the range of the selected converter.

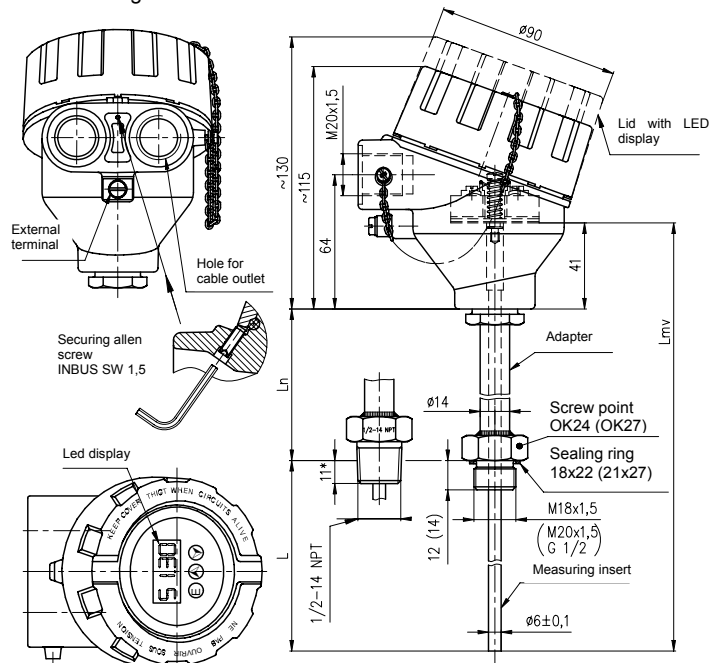

L	Nominal length
L_n	Length of adapter
L_{mv}	Length of measuring insert
11*	Standard length of screwing in

Fixed closure pursuant to ČSN EN 60079-0 ed. 2 and ČSN EN 60079-1, **dust-tight closure** pursuant to ČSN EN 61241-0 and ČSN EN 61241-1: Ex II 2

GD Ex d IIC T1...T6 / tD A IP68 T=T media (meaning of designation - refer to figure 1)

Electric strength pursuant to ČSN EN 61010-1 Article 6.8.4: 500 V eff

(only measuring insert without converter or design with insulated converter)

Electric insulation resistance pursuant to ČSN IEC 751, Article 4.2.1:

min. 100 M Ω , at 15 to 35°C, max. 80 % relative humidity

Power supply of converter:

DC 24 V from source SELV, e.g. INAP 16 and INAP 901

Other data of converter: refer to the enclosed manual

Ingress Protection pursuant to ČSN EN 60529: IP 68

Operation position:

discretionary; the outlet shall not be situated upwards

Type of operation: continuous

Sensor weight:
with adapter 135 mm 0.93 kg

Applied materials:

Stem tube of measuring insert	steel 1.4541
Adapter	steel 1.4541
Head	aluminium alloy painted with blue epoxy colour or corrosion resistant steel 1.4401
Internal wiring	Cu
Head terminals of the terminal board	brass with Ni surface
Connecting elements of the sensor	stainless steel

OPERATION CONDITIONS

The environment is defined by the group of parameters and their severity grades IE 36 pursuant to ČSN EN 60721-3-3 and the following operation conditions.

Ambient temperature for head and outlet of the sensor:

- 50 °C ≤ Ta ≤ 85 °C
for design with converter pursuant to the type of converter (refer to the enclosed converter manual)
- for design with converter and display
-20 °C ≤ Ta ≤ 70 °C

Maximum surface temperature of the sensor:

it corresponds to with maximum temperature of the measured medium

Maximum surface temperatures for equipment operating in the environment with a threat of explosion of gases, steam and mist pursuant to ČSN EN 60079-0 ed. 2 and temperature class of the sensor are determined in dependency on the temperature of measured medium pursuant to the following table:

Temperature class	Maximum surface temperature	Maximum temperature of measured medium
T6	85°C	80°C
T5	100°C	95°C
T4	135°C	130°C
T3	200°C	195°C
T2	300°C	290°C
T1	450°C	440°C

Maximum permitted surface temperature for the equipment operating in the environment with a threat of explosion of dust pursuant to ČSN EN 61241-14:

- a) Temperature limitation due to occurrence of stirred dust:
 $T_{max} = 2/3 T_{ci}$
where T_{ci} is the temperature of ignition of stirred dust
- b) Temperature limitation due to occurrence of layers of dust to 5 mm thickness: $T_{max} = T_{5\text{ mm}} - 75\text{ °C}$
where $T_{5\text{ mm}}$ is the temperature of ignition of dust layer 5 mm thick
- c) Dust layers over 5 mm – refer to ČSN EN 61241-14

Maximum permitted surface temperature is defined by the lower value of the values specified above.



WARNING



The user shall guarantee that the maximum surface temperature of any part of the sensor does not exceed the temperatures of ignition of any gas, steam or dust, which can occur, due to external thermal effects

Vibrations:

Sensor	with converter		without converter	
	Nominal length L [mm]	110, 140, 170	200, 260	110, 140, 170
Frequency range [Hz]	10 to 500			
Drift amplitude [mm]	0.2	0.15	0.5	0.2
Acceleration amplitude [ms ⁻²]	29.4	19.6	68.7	39.2

Relative ambient humidity:

10 to 100 % with condensation, with upper limit of water content 29 g H₂O/kg of dry air

Atmospheric pressure: 70 to 106 kPa

Maximum speed of flow of liquids:

pursuant to parameters of heat sink used by the customer

METROLOGICAL DATA

Sensing probe: measuring resistor Pt 100 in connection pursuant to the scheme and table of designs, $\alpha = 0.00385\text{ [K}^{-1}\text{]}$, tolerance class A or B pursuant to ČSN IEC 751

Internal wiring resistance at 20 °C: 0.1 /m

Calculated resistance value of internal wiring of the design without converter is specified on the label of the measuring insert.

Maximum current load of measuring resistor: 3 mA

Recommended measuring current: 1 mA

Output signal of the converter (linear with measured temperature):

4 to 20 mA (+ digital for HART protocol)

Calibration depth of immersion of the measuring insert of the sensor

for temperature points within the range from -70 to 250°C:

200 mm (min. 160 mm)

for temperature points above 250°C:

300 mm (min. 260 mm)

The distance of flange of the measuring insert from the level of medium in the calibration bath shall be at least 40 mm at temperatures to 250°C and min. 70 mm at temperatures above 250°C.

Temperature response time pursuant to ČSN IEC 751 in whirling water (characteristic value):

Without heat sink (separate measuring insert) 0.5 5.5 s

With heat sinks pursuant to DIN 43772, shape 4

(L = 100, 140)) 0.5 85 s

0.9 250 s

With heat sinks pursuant to DIN 43772, shape 4

(L = 200, 260)) 0.5 53 s

0.9 115 s

CERTIFICATION

- Non-explosiveness
 Ex II 2 GD Ex d IIC T1...T6 / tD A IP68 T=T media
 EC-Type Examination Certificate pursuant to the Decree of the Government 23/2003 Coll. FTZÚ 08 ATEX 0199X
- Non-explosiveness Ex i, EC-Type Examination Certificate pursuant to the Decree of the Government 23/2003 Coll., (pursuant to the converter type)

DESIGNATION:

Data on head label

- Trademark of the manufacturer
- Made in Czech Republic
- Type of resistance sensor, nominal value R₀ / tolerance class / configuration of wires of internal wiring *)
- Measuring range or set-up converter range
- Product ordering number
- Ingress Protection
- Manufacturing number
- Output signal 4 to 20 mA (design with converter)
- Ambient temperature
- Mark of non-explosiveness:
 Ex II 2 GD Ex d IIC T1...T6 / tD A IP68 T=T media
 and number of the EC-Type Examination Certificate
- Designation of non-explosiveness and number of the EC-Type Examination Certificate (for design with converter Ex ia)
- Mark CE 1026
- Mark CE with identification number of notified person (for design with converter Ex ia)

*) Configuration of wires of internal wiring is not specified for the converter

Data on label of measuring insert

- Trade mark
- Sensor type, nominal value R₀ / tolerance class / Configuration of wires of internal wiring *)
- Manufacturing number
- Resistance value of internal wiring (for design without converter)

*) Configuration of wires of internal wiring is not specified for the converter

Data on converter label

- Sensor type
- Pre-set temperature range

DELIVERY

Unless agreed otherwise with the customer, each delivery includes

- Delivery note
- Sensor pursuant to the purchase order
- Sealing ring
 - o Cu 18 x 22 x 1.5 (ČSN 02 9310.2)
for connecting thread M18 x 1.5
 - o 21x27 TPD 62-014-91
for connecting thread M20 x 1.5, G ½
(sealing ring is not delivered for the thread 1/2-14NPT)
- Allen key 1.5 mm

- Suitable cable outlet; it shall be ordered separately pursuant to the catalogue of accessories, type 991. An instruction sheet is delivered with each cable outlet
 - Suitable heat sinks and weld-on pieces ordered separately pursuant to the catalogue of accessories, type 991
 - Optional accessories to the sensor with programmable converter
 - o Configuration (parameterization) programme pursuant to the required converter
 - o Communication modem (for serial port RS 232C) pursuant to the required converter
 - Accompanying technical documentation in Czech
 - o Product quality and completeness certificate, which also serves as the warranty certificate
 - o EC Declaration of Conformity
 - o Calibration sheet (for uncertified calibrated design)
 - o Product manual
- If it is established in the purchase contract or agreed otherwise, the following documentation can be also delivered with the product
- Copy of the Inspection Certificate 3.1 for material of stem tube and heat sink with the casting number
 - Copy of the EC-Type Examination Certificate pursuant to the Decree of the Government 23/2003 Coll. for fixed closure
 - Copy of the EC-Type Examination Certificate pursuant to the Decree of the Government 23/2003 Coll. for design with converter Ex ia

TABLE 1 - DESIGN OF TEMPERATURE SENSORS Ex d TO HEAT SINK TYPE 233

SPECIFICATION					ORDERING NUMBER											
					233	x	x	0	x	x	1	x	x	/xxxxxxx	/xxx	
Nominal length L [mm]	110	Length of adapter L _n [mm]	125	Length of measuring insert L _{mv} [mm]	275	1	1	0	x	x	1	x	x	/xxxxxxx	/xxx	
	140		135		315	2										
	170		125		335	3										
	200		135		375	4										
	260				435	5										
	410				585	6										
	Other (min. 75 *)					9										
Nominal length L [mm]	110	Length of adapter L _n [mm]	65	Length of measuring insert L _{mv} [mm]	215	1	2	0	x	x	1	x	x	/xxxxxxx	/xxx	
	140		245		2											
	170		275		3											
	200		305		4											
	260		365		5											
	410		515		6											
	Other (min. 75 *)				9											
Length of adapter	135 mm (125 mm)					1										
	65 mm	max. -70 to 250°C				2	0									
	Other *) **) (min. 65 mm)						9									
Connecting thread	M18 x 1.5							1								
	M20 x 1.5							2								
	G1/2								3							
	1/2-14NPT									5						
Head of the sensor with thread for outlet (Ex d)	Aluminium alloy painted with blue epoxy colour		M20x1.5						1							
			1/2-14NPT						2		1					
	Corrosion resistant steel 1.4401		M20x1.5							3						
			1/2-14NPT							4						
Measuring resistor (sensing probe)	Pt100										1					
Tolerance class	A max. -70 to 300°C													A		
	B													B		
Connection of terminal board (Pt100)	Single - four-wire (1xPt)													/J4		
	Double - two-wire (2xPt/B)													B /D2		
	Double - three-wire (2xPt)													/D3		
Converter type		Galvanic separation	Ex ia	Range [°C]												
Analogue	INPAL 420			-50 to 50										/07		
				-30 to 70										/55		
				0 to 50										/15		
				0 to 100										/18		
				0 to 150										/19		
				0 to 200										/20		
				0 to 250										/21		
		0 to 400		1									/23			
	APAQ-HRF			Adjustable range									/HRF			
	APAQ-HRFX		•										/HRFX			
Programmable	TH 100													/TH100		
	TH 100-ex		•											/TH100X		
	TH 200		•											/TH200		
	TH 200-ex		•	•										/TH200X		
	IPAQ-H		•											/IPAQH		
	IPAQ-HX		•	•										/IPAQHx		
	MINIPAQ-HLP													/MINIPAQ		
HART protocol	TH 300		•											/TH300		
	TH 300-ex		•	•										/TH300X		
	MESO-H		•											/MESOH		
	MESO-HX		•	•										/MESOHx		
	248 HA NA		•											/248HANA		
	248 HA I1		•	•										/248HA1X		
	644 HA NA		•											/644HANA		
644 HA I1		•	•										/644HA1X			
Other *)														/99		
Without converter (for installation of the converter by the customer)														/00		
LED display to loop 4-20 mA (only with converter INPAL 420, APAQ-HRF, TH 100, MINIPAQ-HLP)																
LED display (not possible with head from corrosion resistant alloy)															/LD	
Standard design																

*) Only as a special requirement after an agreement with the manufacturer
 **) In case of adapter length below 125 mm (minimum 65 mm), the temperature range is decreased to -70 to 250 °C.

ORDERING TEMPERATURE SENSORS

The purchase order shall specify

- Name
- Product ordering number
- Measuring range
- If calibration is required and in what temperature points
- If the delivery of heat sink and weld-on piece pursuant to the type 991 is required for the sensor as accessories
- If the delivery of outlet for output cable pursuant to the type 991 is required for the sensor as accessories
- If optional accessories to the sensor with programmable converter is required
- Other (special) requirements
- Number of pieces

Behind the ordering number specified pursuant to the above mentioned table, the customer shall identify the required range of measured temperature (i.e. lower and upper temperature limits in °C) and, as the case may be, other non-standard required parameters for converter configuration (e.g. indication of sensor tripping, dampening, required designation - tagging etc.).

PURCHASE ORDER EXAMPLE

Standard design:

Resistance sensor temperature Ex d to heat sink DIN
Without converter
233 410 111 1B/J4
Range -70 to 450°C
6 pcs

Special request:

Resistance sensor temperature Ex d to heat sink DIN
With converter
233 910 211 1B/18
Nominal length L 380 mm
Range 0 to 100°C
6 pcs

ORDERING HEAT SINKS AND WELD-ON PIECES AND OUTLETS

The purchase order shall specify:

- Name
- Product ordering number
- Number of pieces

PURCHASE ORDER EXAMPLE

Standard design:

Welding heat sink pursuant to DIN, shape 4
991 DIN 407244 20 pcs

ORDERING NUMBERS OF WELD-ON PIECES, type 991

- Weld-on piece - 991 NVD4 D24 51 (material 15 128.5)
- 991 NVD4 D26 51 (material 15 128.5)
- 991 NVD4 D24 72 (material 1.4541)
- 991 NVD4 D26 72 (material 1.4541)

ORDERING NUMBERS OF OUTLETS, type 991

- Outlet M 20 x 1.5 (with clamp against cable pull-out)
 - for cable Ø4 8.5mm VM 408
 - for cable Ø 6 12mm VM 612
 - for cable Ø 8.5 16mm VM 816
 - (the set consists of the outlet itself, cable clamp and sealing under outlet 20x24)
- Outlet 1/2-14NPT (with clamp against cable pull-out)
 - for cable Ø 4 8.5mm VK 408
 - for cable Ø 6 12mm VK 612
 - for cable Ø 8.5 15.5mm VK 815
 - (the set consists of the outlet itself and cable clamp)

TABLE 2 – OVERVIEW OF DESIGNS AND ORDERING OF WELDING HEAT SINKS PURSUANT TO DIN, SHAPE 4 (4F)

SPECIFICATION					ORDERING NUMBER									
					991	DIN	x	x	x	x	x	x		
Heat sink with cone pursuant to type 991	Welding	Heat sink, shape 4 pursuant to DIN 43772	Without flange PN 250				4	0						
			With flange **)				4	F						
		Inner bore [mm]								7				
		Inner bore / outer Ø of heat sink		M18x1.5/ Ø 24								2		
		M20x1.5/ Ø 26								3				
		G 1/2/Ø 26								4				
Nominal length of heat sink L [mm]	110	L1 [mm]	65	L2 [mm]	105							1		
	140		65		140						2			
	170		133		170						3			
	200		65		200						4			
	200		125		200						5			
	260		125		260						6			
	410		275		410						7			
	Other (max. 410) *)										9			
Heat sink material ***)	1.7335 *)	Cannot be used for zone 0	Maximum operation temperature	550 °C									1	
	1.7380			580 °C									2	
	1.4541			580 °C										3
	1.4571			400 °C										4
	Other *)****)			Pursuant to heat sink material										

*) Upon a special request after an agreement with the manufacturer
 **) Flange design (shape, PN, DN and material) pursuant to the requirement of the customer
 ***) Surface treatment of heat sinks from material 1.7335 and 1.7380: preservation with grease - oil
 ****) For zone 0, heat sink from corrosion resistant steel shall be used (pursuant to (pursuant to ČSN EN 60079-26 ed. 2)

PACKING

Both sensors and accessories are delivered in a packing ensuring resistance to the impact of thermal effects and mechanical effects pursuant to controlled packing regulations.

TRANSPORT

The sensors may be transported on conditions corresponding to the set of combinations of classes IE 21 pursuant to ČSN EN 60721-3-2 (i.e. by airplanes and trucks, in premises that are ventilated and protected against atmospheric conditions).

STORAGE

The products may be stored on conditions corresponding to the set of combinations of classes IE 12 pursuant to ČSN EN 60721-3-1 (but with ambient temperature from -20 to 70 °C (i.e. in places without regulation of temperature and humidity, with a threat of occurrence of condensation, dripping water and formation of ice, without a special threat of an attack with biological agents, with vibrations of small significance and not situated close to sources of dust and sand).

RELIABILITY

Indicators of reliability in operation conditions and conditions of the environment specified herein

- Mean time of operation between failures 96 000 hours
(inf. value)
- Expected service life 10 years

CALIBRATION

It is realized pursuant to TPM 3342-94 and in compliance with ČSN IEC 751, usually in three temperature points evenly distributed within the operation range of the sensor or in the points according to the requirement of the customer. Calibration sheets with measured data are issued for calibrated sensors.

INSTALLATION AND CONNECTION

SENSOR INSTALLATION

Install the sensors by screwing into the relevant heat sink screwed into the weld-on piece on the piping (technological equipment) or welded into the piping wall. Before the installation, put on the enclosed sealing ring in advance (for thread 1/2-14NPT, the sealing ring is not used). During the installation, torque of 70 Nm is recommended, for thread 1/2-14NPT 40 Nm.

With respect to maintaining metrological properties and the longest possible service life, it is not recommended to install the sensors in places with high turbulence of the medium, which is caused e.g. by a rapid transition from a small diameter of the piping to a larger one (when failing to comply with the required shape and dimensions of diffuser behind the flow meter), etc. Recommended distance of the temperature sensor from the installation flange of the flow meter is min. 1 m.




WARNING

The temperature sensor may only be used for zone 0 only in a set with the heat sink pursuant to ČSN EN 60079-26 ed. 2.

Distance of the fixed closure Ex d IIC from close structures or between the closures shall be at least 40 mm.



EXAMPLES OF INSTALLATION OF HEAT SINKS DIN

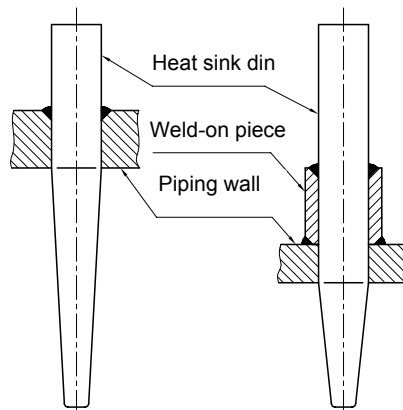

INSTALLATION OF CABLE OUTLET

To secure the fixed closure, only the certified cable outlet (Ex) II 2 GD Ex d IIC with Ingress Protection IP 68 shall be used - refer to accessories 991 or another similar outlet). It shall be tightened in the sensor head in the prescribed way.

Torque of outlet body:

- a) for outlet with thread 1/2 - 14NPT 25 – 30Nm
- b) for outlet with thread M20x1.5 30 – 35Nm

Installation of the cable in the outlet, its sealing and securing against pull-out shall be realized pursuant to the instruction sheet of the outlet supplier.



WARNING

Do not use other sealing rings in the outlet than the original ones delivered by the manufacturer. Do not change artificially the outer diameter of the cable e.g. by winding it around with electrical insulating tapes.

ELECTRICAL CONNECTION

The electrical connection may be only realized by qualified workers pursuant to § 5 of the Decree 50/1978 Coll.

The sensor installation in conditions with explosive gaseous atmosphere shall comply with the requirements of ČSN EN 60079-14 ed. 2.

The sensor installation in conditions with flammable dust shall comply with the requirements of ČSN EN 61241-14.

The sensor without converter can be used, in case of the installation pursuant to ČSN EN 60079-14 ed.2 (ČSN EN 61241-14), as a simple equipment pursuant to ČSN EN 60079-11, Article 5.7. in intrinsically safe circuit Ex ia. It may be used as electrical equipment of group IIC with temperature class T1...T6 depending on the temperature of measured medium pursuant to ČSN EN 60079-0 ed.2 in zone 0 (20).

The terminal board of the sensor (converter) is accessible after the unscrewing of the lid of the head.

Connect the evaluation devices to the sensor with a non-armoured cable with double insulation (internal wires with Cu core with cross-section 0.5 to 1.5 mm²). Seal the cable in the outlet by prescribed tightening of the closing nut pursuant to instruction sheet of the outlet. Then secure it with clamp against pull-out.



WARNING

Do not use independent wires without jacket for electrical connection. To ensure the Ingress Protection grade in the outlet, the connecting cable shall have circular cross-section. Temperature resistance of the cable shall comply with the ambient temperature!

The cable insulation shall have chemical and mechanical resistances in compliance with the conditions, in which the cable will be installed. It is recommended supporting the cable along its length between the sensor and the follow-up device. In the environment with interfering signals, use a shielded cable in the power supply circuit. Shielding may be only grounded (earthed) in one point. The cable should not be placed together with power cables.

In case of the sensor with HART protocol converter, the maximum length of wiring is defined by the arrangement of wires of the connecting cable. The total length of wiring may be up to 1500 m. It requires a twisted two-wire with shared shielding with the cross section of the core min. 0.5 mm². The HART communicator is connected to the supply loop of the sensor with converter pursuant to Figure 3. To ensure reliable commutation, there shall be total load resistance of min. 250 Ω in the circuit of the output loop.



WARNING

Programmable converter may not be connected to a computer or a HART communicator, if the converter is located in explosive environment.



WARNING for sensor with converter Ex ia

Ex ia parameters of the converter shall be complied with pursuant to the enclosed converter manual.


To ensure safety, an intrinsically safe source shall be always used pursuant to the converter manual, e.g. INAP 901, ordering number 901 000 101.

Surface temperature of the converter may not exceed maximum surface temperature for that particular temperature class.

For the installation in a dangerous area, interconnection (bringing to the same potential) is required. To achieve it, you can use the terminals on the sensor head.

The sensor need not be connected to the system of mutual connection independently if it is installed firmly and has metal interconnection with the structural parts or the piping, which is connected to the system of mutual connection.

HEAD OF THE SENSOR WITH TERMINALS

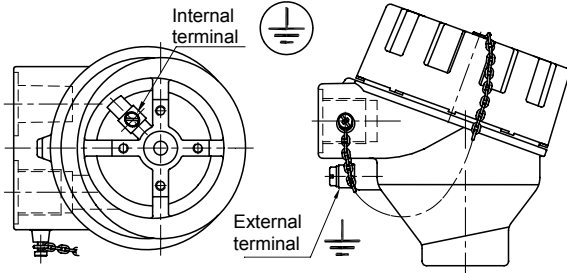

Maximum cross-section of wire for connection to external and internal terminals:

Internal terminal: stranded wire 1.5 mm², full wire 2.5 mm²
 External terminal: stranded wire 4.0 mm², full wire 6.0 mm²
 If stranded wires are used for the interconnection, they shall be protected against fraying with pressing hollow.

CLOSING HEAD OF FIXED CLOSURE Ex d

After electrical connection of the sensor, the lid of the head shall be fully tightened by hand, then released slightly to ensure matching with the closest groove against the securing pin and fixed with this screw against releasing. If the lid of the sensor is not tightened and secured by the above mentioned screw, the sensor does not comply with the requirements of fixed closure Ex d.



WARNING:

Power supply of the sensor may not be connected before closing the fixed closure!



COMMISSIONING

After the sensor installation, including the fixed closure, and connection of the follow-up (evaluation) device to the supply voltage (and the settlement period of the converter), the equipment is prepared for operation.

Electrical installations in dangerous areas require an initial revision pursuant to ČSN EN 60079-17 ed.3 (ČSN EN 61241-17).

OPERATION AND MAINTENANCE

The sensor does not require any operation; maintenance and follow-up regular periodic revision or permanent supervision of expert staff are performed pursuant to ČSN EN 60079-17 ed.3 (ČSN EN 61241-17).



WARNING

Any intervention into the sensor and its structure will result in a change of properties and can result in an explosion!



SENSOR UNINSTALLATION



WARNING

The temperature sensor is in design Ex and must be disconnected from the power supply source before opening the lid of the head and releasing the cable outlet in the explosive environment!



Then release the securing screw of the lid by ALLEN key 1.5 mm (a part of accessories). The terminal board of the sensor (converter) is accessible after unscrewing the lid of the head. The measuring insert of the sensor can be replaced and is removed from the head after disconnecting the cable by releasing two screws.

Before a complete uninstallation of the sensor, the wire for mutual interconnection shall be released from the external terminal or the internal terminal on the head of the sensor. Disconnect the connecting cable from the terminal board, then release it from the clamp on the outlet and from closing nut of the outlet. Unscrew the sensor from the heat sink; torque for releasing is approx. 70 Nm; 40 Nm for thread 1/2-14NPT.

While releasing the screw joint of the sensor, the heat sink may never be released.

SPARE PARTS

Spare parts shall be delivered by the manufacturer. Relevant measuring inserts can be ordered pursuant to the following table:

SPECIFICATION	ORDERING NUMBER				
	MV230	/xxx/	1	x	/xxxx
Length of measuring insert [mm]		pursuant to tab. 1	1		
Sensing probe	Pt100			1	
Tolerance class	A				A
	B				B
Connection of terminal board or converter	Pt100/ /4				/J4
	2xPt100/B/2				/D2
	2xPt100/ /3				/D3
	Converter pursuant to tab. 1				/converter

EXAMPLE OF PURCHASE ORDER OF MEASURING INSERT

Resistor measuring insert without converter
 230 /375/ 11B/J4 - 6 pcs

WARRANTY

Pursuant to § 429 of the Commercial Code and the provisions of § 620 (2) of the Civil Code, the manufacturer warrants for technical and operation parameters of the product specified in the manual. The warranty period is 24 months from the receiving of the product by the customer, unless established otherwise in the contract. Rejection of defects shall be enforced in writing at the manufacturer within the warranty period. The rejecting side shall identify the product name, ordering and manufacturing numbers, date of issue and number of the delivery note, clear description of the occurring defect and the subject of the claim. If the rejecting side is invited to send the device for repair, it shall do so in the original package of the manufacturer and/or in another package ensuring safe transport.

The warranty shall not apply to defects caused by unauthorized intervention into the device, its forced mechanical damage or failure to comply with operation conditions of the product and the product manual.

REPAIRS

The sensors shall be repaired by the manufacturer. They shall be sent for repair in the original or equal package without accessories.

DISABLING AND LIQUIDATION

They shall be realized in compliance with the Waste Act No. 106/2005 Coll.

The product and its package do not include any parts that could impact the environment.

Products that are withdrawn from operation, including their packages (with the exception of products marked as electrical equipment for the purposes of return withdrawal and separate salvage of electrical waste), may be disposed of to sorted or unsorted waste pursuant to the type of waste.

The manufacturer realizes free return withdrawal of marked electrical equipment (from 13.8.2005) from the consumer and points out the danger connected with their illegal disposal. The package of the sensor can be recycled completely. Metal parts of the products are recycled, non-recyclable plastic materials and electrical waste shall be disposed of in compliance with the aforesaid Act.

FIGURE 1 – MARK OF NON-EXPLOSIVENESS

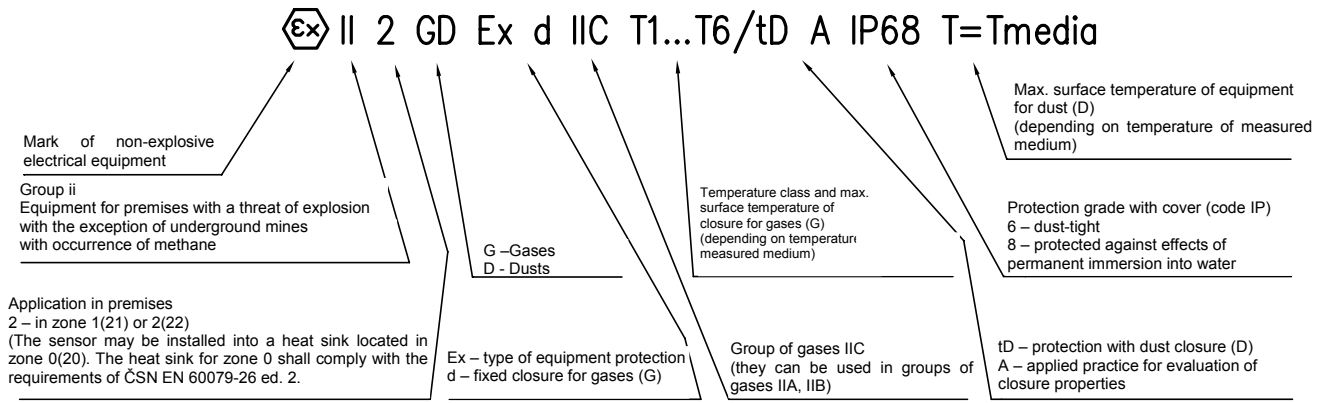


FIGURE 2 – HEAT SINK FOR SENSOR TEMPERATURE Ex d FOR ZONE 0 (pursuant to ČSN EN 60079-26 ed.2)

Heat sink that is used in the function of a partition wall between the zones 1 or 2 and zone 0 shall be made of a corrosion resistant metal and with wall thickness $t \geq 1$ mm



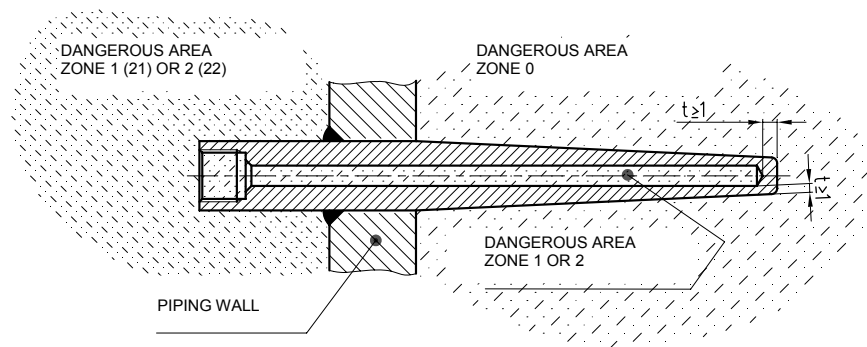


FIGURE 3 – SCHEME OF CONNECTION OF TEMPERATURE SENSORS
without converter with converter



with single measuring resistor in four-wire connection (Pt 100/ I4)

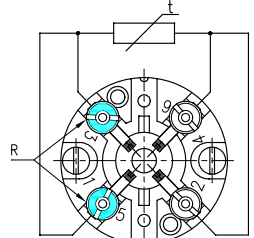

with double measuring resistor in two-wire connection (2 × Pt 100/B/2)

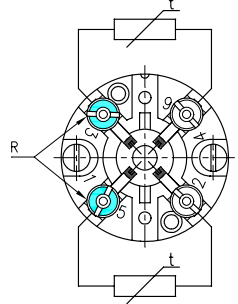

with double measuring resistor in three-wire connection (2 × Pt 100/ I3)

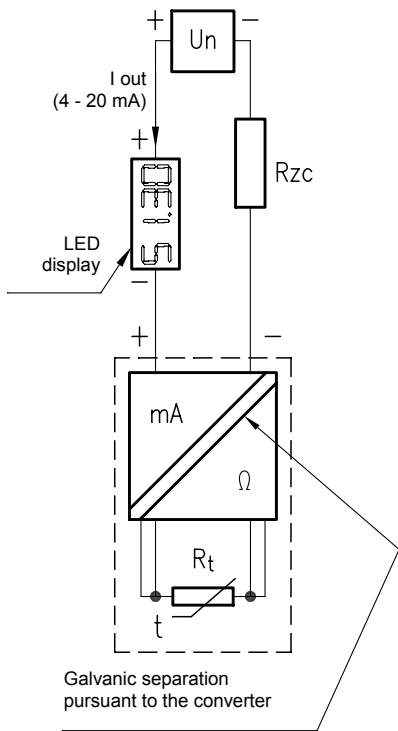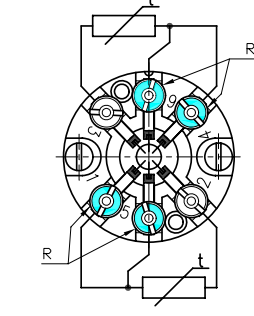

with converter with HART protocol

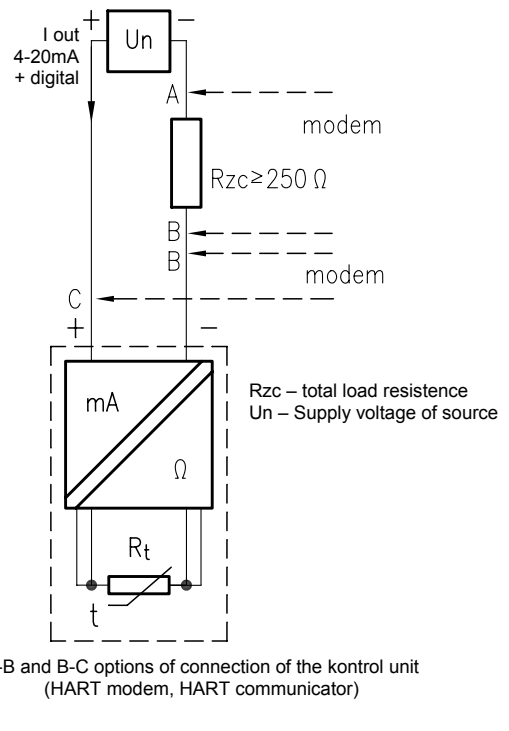


FIGURE 4 - EXAMPLE OF OPERATION CONNECTION OF TEMPERATURE SENSOR WITH CONVERTER IN LOOP 4 - 20 MA


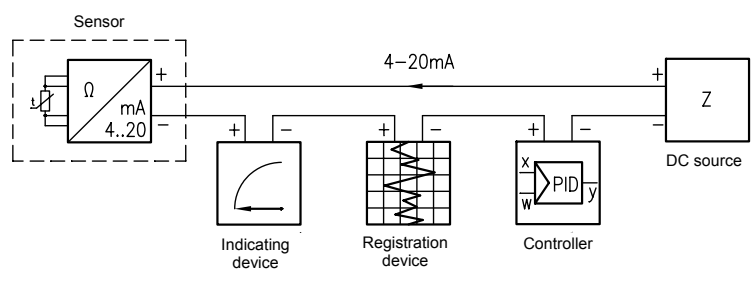


FIGURE 5 – EXAMPLE OF INSTALLATION OF TEMPERATURE SENSORS Ex d TO HEAT SINK DIN

(in case a higher limit of the measurement range is required on a level exceeding the required temperature class)



August 2008
ZPA Nová Paka, a.s.

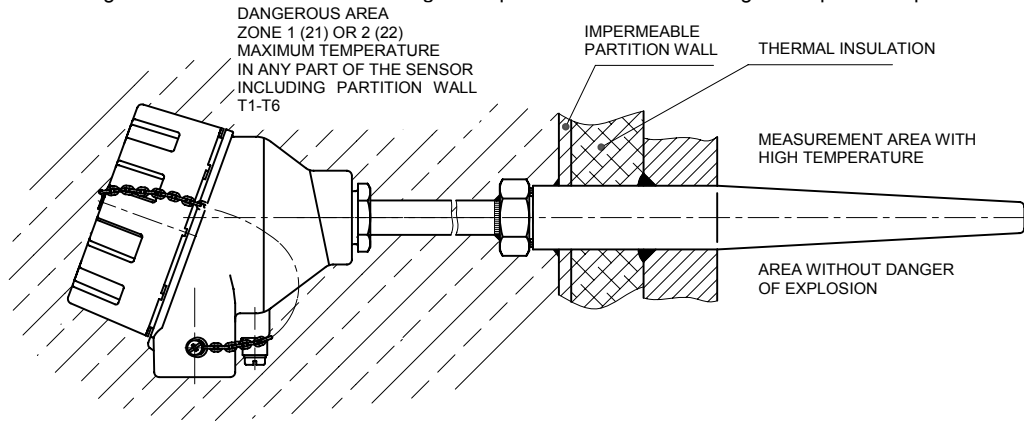

NOVÁ PAKA



1026



ZPA Nová Paka, a. s.
Pražská 470
509 39 Nová Paka

tel.: spojovatel: 493 761 111
fax: 493 721 194
e-mail: obchod@zpanp.cz

www.zpanp.cz
bankovní spojení: ČSOB HK
číslo účtu: 271 992 523/0300

IČO: 46 50 48 26
DIČ: CZ46504826